


**USERS INFORMATION MANUAL**

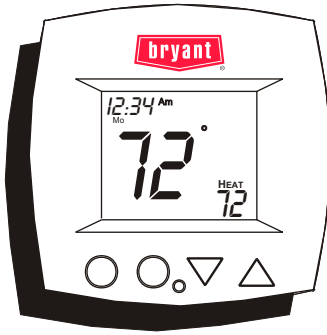

**MODEL TSTATBBP2W01  
PROGRAMMABLE DIGITAL  
THERMOSTAT**

**NOTE TO INSTALLER:**  
This manual must be left with the equipment user.



• Heat only, or Cool only

- 2 - Wire Operation
- No Batteries Required
- Simple, Single Setpoint
- 7 Day Programmable
- 4 Time Periods
- Very Easy to Program
- Large, Easy To Read Display
- Thermoglow™ Backlight
- Locking Keypad

• Meets California Title 24 Residential

## Table Of Contents

<b>FRONT PANEL</b>	2
<b>DISPLAY</b>	3
<b>QUICK START</b> <i>Set the clock and go</i>	5
<b>BASIC OPERATION</b>	6
<b>PROGRAMMING</b> <i>Time Periods</i>	8
<b>ADVANCED SETUP</b>	12
<b>ABOUT ADVANCED OPERATION</b>	16
<b>WARRANTY</b>	19



### CAUTION

Follow *Installation Instructions* before proceeding.


SET THERMOSTAT TO MODE "OFF" PRIOR TO  
CHANGING SETTINGS IN SETUP OR RESTORING  
FACTORY DEFAULTS.

---

Residential Light Commercial Systems © Carrier Corporation 4/01


**TSTATBBP2W01**

## Front Panel

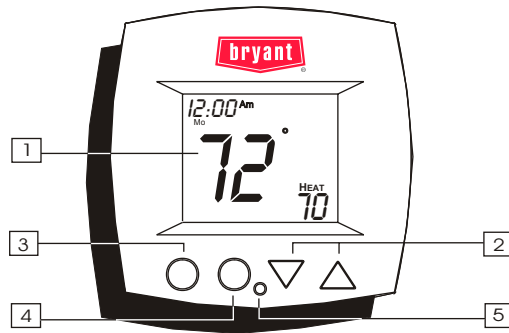

- 1 **Liquid Crystal Display**  
*with Thermoglow™*
- 2 **Up/Down Buttons**
- 3 **On/Off Button**
- 4 **Outside Button**
- 5 **Heat or Cool Indicator**  
Heat = Red, Cool = Green

## Display

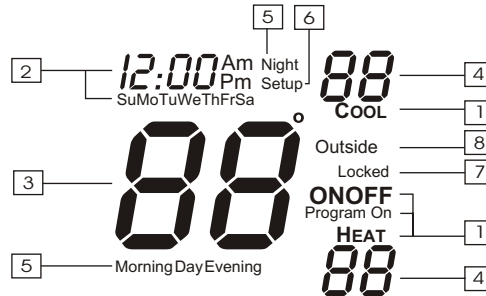


- 1 Mode Indicators  
Selects the operation mode of the equipment.  
**HEAT** - indicates the heat mode.  
**COOL** - indicates the air conditioning mode.  
**OFF** - indicates the entire system is turned off.  
**PROGRAM ON** - indicates the stored program is enabled to run. *Page 6.*
- 2 Clock with Day of the Week  
Indicates the current time and day. This clock is also used to program the time periods. *Page 5.*
- 3 Room Temperature Display  
Indicates the current room temperature, or can be configured to display the setpoint. *Page 7.*
- 4 Desired Set Temperature  
Indicates desired room temperature(s). *Page 7.*

## Display

- 5 Morning, Day, Evening & Night Indication  
Indicates the program time period.  
*Page 8-11.*
- 6 Setup Indication  
Indicates the thermostat is in the programming mode. *Page 12.*
- 7 Locked Indication  
**Locked** appears after the right combination of buttons are pressed, rendering the buttons inoperative. *Page 16.*
- 8 Outside Indication  
Outside temperature appears after pressing the Outside button if the thermostat is connected to an optional Outside Sensor.

**Quick Start** *Set the Clock and Go*

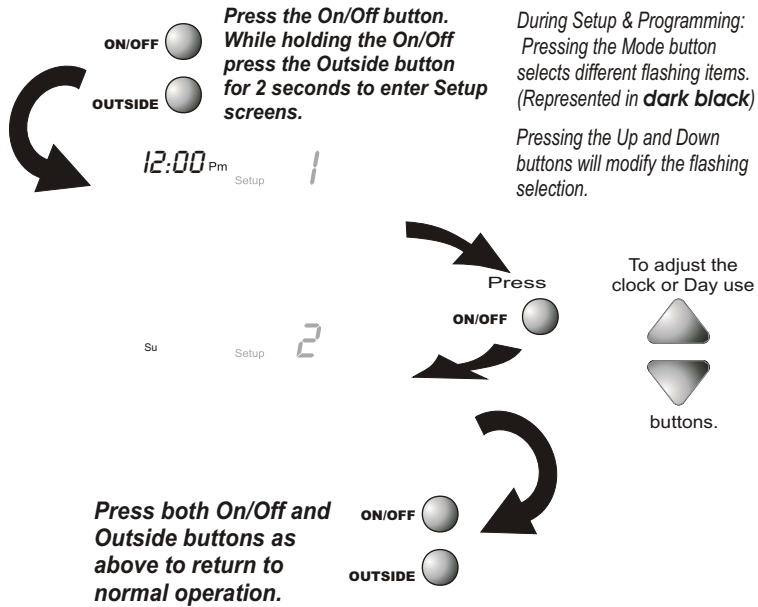


The thermostat is preprogrammed from the factory to operate without the need for further programming. To optimize the installation of this thermostat follow the instructions in the Advanced Setup section.

## Basic Operation

### Select Mode

The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.

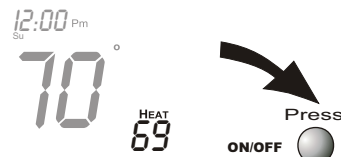

**Program On** will activate the stored timer operation. (Morning, Day, Evening, Night)



**OFF** indicates the heating system is turned off.



*NOTE: The operating mode of this thermostat may be changed from the factory default HEAT operation, to COOL operation in the Advanced Setup Section.  
In the following pages Cool operation may be substituted for Heat operation if the factory default is changed in Advance Setup Step #3.*

*The Program On operating mode will be bypassed if the factory default is changed in Advanced Setup, step #4.*

## Basic Operation

### Select Desired Temperature



Adjust the  
desired Set Temperature  
with



buttons.

Pressing the up/down buttons in Heat or Cool will adjust only the Heat or Cool set temperature.

---

### Outside Temperature



*This feature is only available if an optional wired, or wireless Outside Sensor is connected to the thermostat.*





Pressing the Outside button will display the outside temperature. A subsequent press of the Outside button will return the display to the previous screen. Normal operation will continue while the Outside temperature is being displayed.





# Programming

# 4 Time periods

 **Press the On/Off button. While holding the On/Off, press the Up button for 2 seconds to enter time period programming.**  




  
 Select the Day of the Week.

Mo

  
 Adjust the start time for Morning.

6:00<sup>Am</sup>  
Mo

Morning

  
 Adjust the heating setpoint for Morning.  
(35° - 99°)

6:00<sup>Am</sup>  
Mo

70

HEAT

Morning

Press



Press



Press



Press



Continued

# Programming

## 4 Time Periods




Adjust the start time for Day.

8:00<sup>Am</sup>

Mo

Day

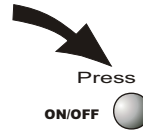

Adjust the heating setpoint for Day.  
(35° - 99°)

8:00<sup>Am</sup>

Mo

Day

62<sup>HEAT</sup>



Adjust the start time for Evening.

6:00<sup>Pm</sup>

Mo


Evening



Continued

# Programming

# 4 Time Periods

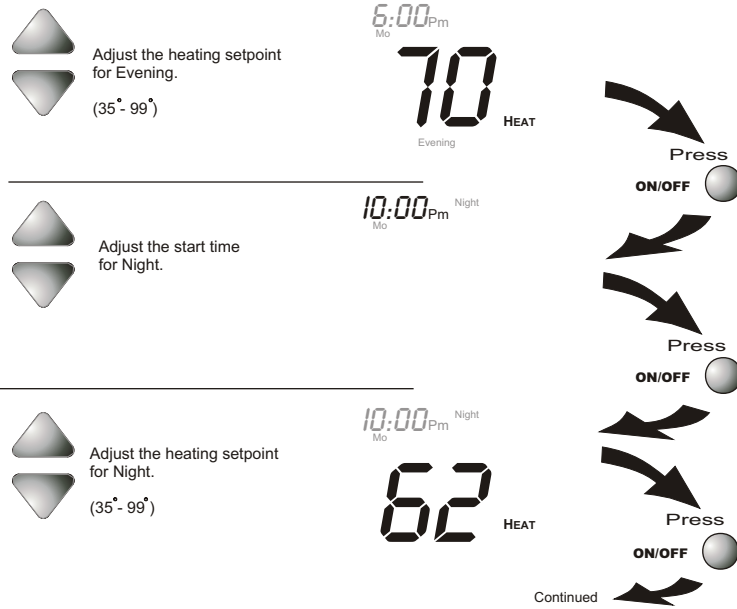

### Copy Command



Yes

Select **Yes** to copy the stored program to the next day.




No

Select **No** to continue manually storing the time period programming for the next day.

NO  
Tu  
00

Py

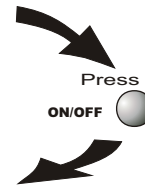


If **NO** was selected above, Continue Time Period Programming Morning through Night as done in previous steps starting on page 8 for the next day's schedule.





Press the On/Off button. While holding the On/Off, press the Up button to exit time period programming.
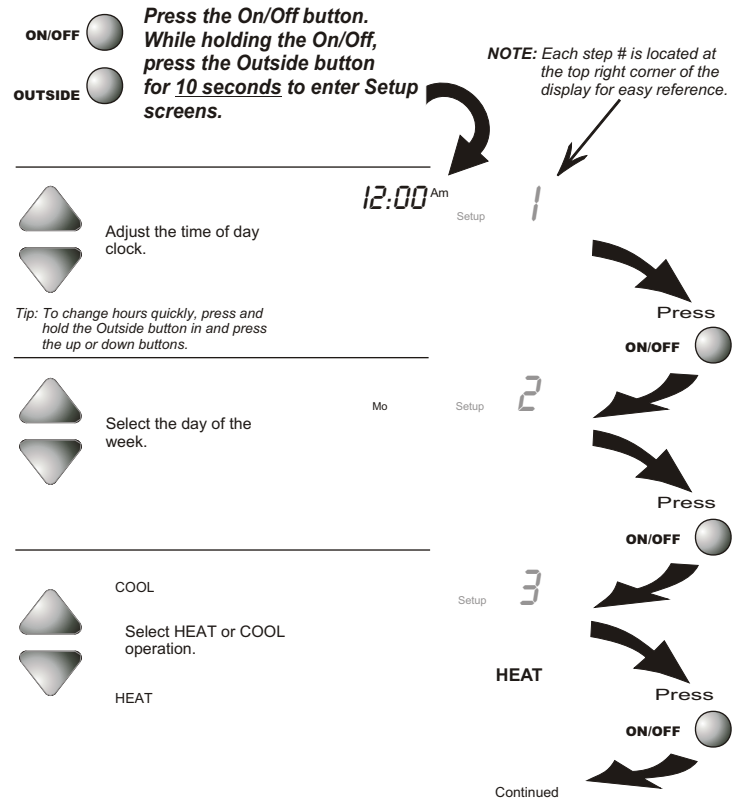
## Advanced Setup



## Advanced Setup

 ON  
 Select the operation of the thermostat:  
 ON is 7-day programmable,  
 OFF is non-programmable  
 OFF

Setup 4

ON Program



Press





ON/OFF



Press



ON/OFF

 Configure the display.  
 1 = setpoint only  
 2 = room temperature with setpoint.

dSP Setup 5

2



Press



ON/OFF



Press



ON/OFF

 Adjust the deadband  
 from 1 - 6 degrees.  



Setup 6

2



 db



Press



ON/OFF

 Select the cycles per hour limit.  
 d=cycles per hour limit defeated.  
 d1=d + defeat 5 min.  
 Compressor lockout, lockout is for Cool operation.

Setup 7

6

cy



Press




ON/OFF

(d, d1, 2 - 6)

Continued

## Advanced Setup

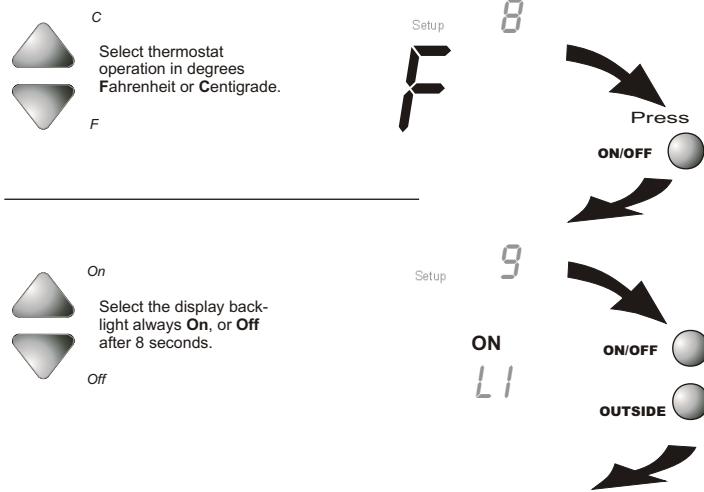

**Press the On/Off button.  
While holding the On/Off press the  
outside button to leave the Setup screens.  
If no buttons are pressed, the display will  
leave the setup screens after 60 seconds.**

## Advanced Setup

### Advanced Setup Table

Step #	Description	Range	Factory Default
1	Time of day clock set	24 hour	12:00 Am
2	Day of the week	Sun - Sat	Monday
3	Operating Mode - Heat or Cool	Heat / Cool	Heat
4	Programmability flag	On / Off	On
5	Configurable Display	1 / 2	2
6	Deadband or Temperature swing	1 - 6	2
7	Cycles per hour	d, d1, 2 - 6	6
8	Fahrenheit or Centigrade	F / C	F
9	Thermoglow backlight	Off / On	On

#### **SINGLE SETPOINT OPERATION**

The thermostat display may be configured such that only the setpoint is visible.

This is done in Advance Setup Step #5, by selecting 1.

The room temperature may be viewed by holding in the On/Off button for 2 seconds. Releasing the On/Off button will return the display to the previous screen.

#### **OUTDOOR SENSOR**


An outdoor temperature sensor may be connected to this thermostat. Totaline offers wired or wireless models. Compatible models include: P474-0401RF/REC & P474-0400.

Consult the remote sensor instruction sheet for wiring connections.



## About Advanced Features & Operation

- \* **KEYPAD LOCK** - To prevent unauthorized use of the thermostat, the front panel buttons may be disabled. To disable, or 'lock' the keypad, press and hold in the On/Off button. While holding the On/Off button in, press the Up and Down buttons in together. The **Locked** icon will appear on the display.

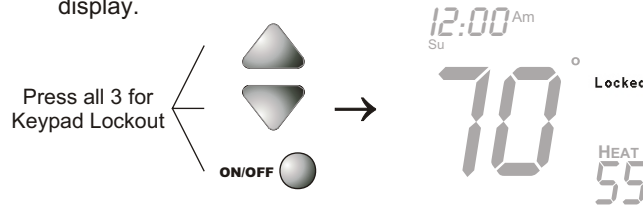


To **unlock** the buttons, again press and hold the On/Off button. While holding the On/Off button in, press the Up and Down buttons in together. The **Locked** icon will disappear from the display.

- \* **FACTORY DEFAULTS** - If, for any reason it is desirable to return all stored settings back to the factory default settings, press the On/Off button. While holding the On/Off button in, press the Down button for 5 sec. All icons will appear. Press and hold in the Outside button until **Fd** appears. This resets all factory settings. **To calibrate room temperature**, press the On/Off button once more. At this point use the Up and Down buttons to calibrate room temperature, if needed. Press the On/Off button to return to normal operation. **NOTE CAUTION ON PAGE 1.**


**About Advanced Features & Operation**

\* OPTIONAL LOCKING COVER

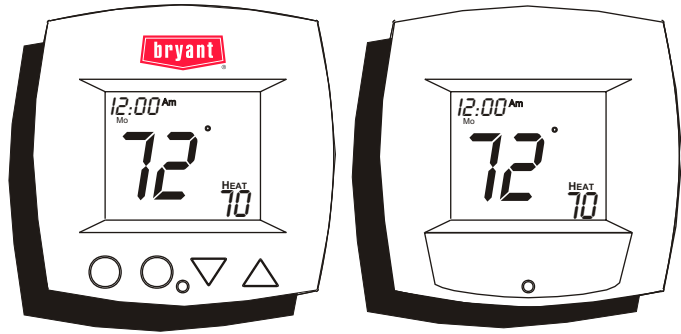

**About Advanced Features & Operation**

**TWO-WIRE THERMOSTAT  
INSTALLATION WIRING**

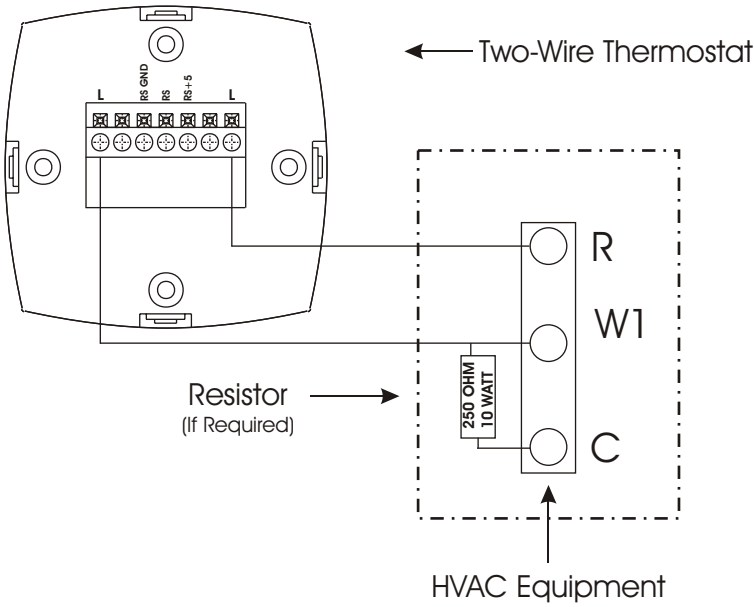

If the Two-Wire thermostat is losing time or showing PF or P- it may be necessary to install the 10 watt 250 ohm resistor that is supplied with the thermostat.

## Warranty

**One-Year Warranty** - This Product is warranted to be free from defects in material and workmanship. If it appears within one year from the date of original installation, whether or not actual use begins on that date, that the product does not meet this warranty, a new or remanufactured part, at the manufacturer's sole option, to replace any defective part will be provided without charge for the part itself; PROVIDED the defective part is returned to the distributor through a qualified servicing dealer.

THIS WARRANTY DOES NOT INCLUDE LABOR OR OTHER COSTS incurred for diagnosing, repairing, removing, installing, shipping, servicing or handling of either defective parts or replacement parts. Such costs may be covered by a separate warranty provided by the installer.

THIS WARRANTY APPLIES ONLY TO PRODUCTS IN THEIR ORIGINAL INSTALLATION LOCATION AND BECOMES VOID UPON REINSTALLATION.

LIMITATIONS OF WARRANTIES – ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH THE LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MANY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER, OR OTHER PERSON WHATSOEVER.

ALL WORK UNDER THE TERMS OF THIS WARRANTY SHALL BE PERFORMED DURING NORMAL WORKING HOURS. ALL REPLACEMENT PARTS, WHETHER NEW OR REMANUFACTURED, ASSUME AS THEIR WARRANTY PERIOD ONLY THE REMAINING TIME PERIOD OF THIS WARRANTY.

### THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the installation and servicing instructions or owners manual including filter cleaning and/or replacement and lubrication.
2. Damage or repairs required as a consequence of faulty installation, misapplication, abuse, improper servicing, unauthorized alteration or improper operation.
3. Failure to start due to voltage conditions, blown fuses, open circuit breakers or other damages due to the inadequacy or interruption of electrical service.
4. Damage as a result of floods, winds, fires, lightning, accidents, corrosive environments or other conditions beyond the control of the Manufacturer.
5. Parts not supplied or designated by the Manufacturer, or damages resulting from their use.
6. Manufacturer products installed outside the continental U.S.A., Alaska, Hawaii, and Canada.
7. Electricity or fuel costs or increases in electricity or fuel costs from any reason whatsoever including additional or unusual use of supplemental electric heat.
8. ANY SPECIAL INDIRECT OR CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER. Some states do not allow the exclusion of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

P/N 88-333

Form No. OM17-34  
Catalog No. 13TS-TA26